

## Using a Digital Multimeter

In this course we will frequently use a *digital multimeter* to measure the voltage, current and resistance of circuit components. While these instructions are specific to the *Metex M-3800 Digital Multimeter* shown in Figure 1, the basic concepts apply to any multimeter.

### 1. Multimeter settings:

The front of the multimeter is divided into six sections; the large knob in the center allows you to choose the type of measurement and voltage (DC – direct current, or AC – alternating current) to be used. The sections are as follows, clockwise from the top:

- **OHM:** This range of settings allows the multimeter to be used as an *ohmmeter* to measure the resistance of a circuit component. The scale settings range from  $200\ \Omega$  (*ohms*) to  $20\ M\Omega$  (*megohms*). There is also a setting with a musical note above it; this setting will provide an audible tone when the resistance of a component is less than  $30\ \Omega$ .
- **DCV:** This range of settings allows the multimeter to be used as a *voltmeter*, specifically to measure *direct current* voltages. A voltmeter measures the difference in electric potential (voltage) *across* a circuit component. The battery in your car and in a flashlight are DC voltage sources. The scale settings range from  $200\ mV$  (*millivolts*) to  $1000\ V$  (*volts*).
- **ACV:** Another voltmeter setting, this time measuring *alternating current* voltages. A standard electrical wall outlet is an AC voltage source. The scale settings range from  $200\ mV$  to  $700\ V$ .
- **ACA:** These settings allow the multimeter to be used as an *ammeter* to measure the flow of current through a circuit, specifically AC current. The scale settings range from  $200\ \mu A$  (*microamperes*) to  $2\ A$  (*amperes*).
- **DCA:** Another ammeter setting, this time measuring direct current. The scale settings range from  $200\ \mu A$  to  $2\ A$ .
- **h<sub>FE</sub>:** This position is used to measure transistors. You will not be using this setting in this course.

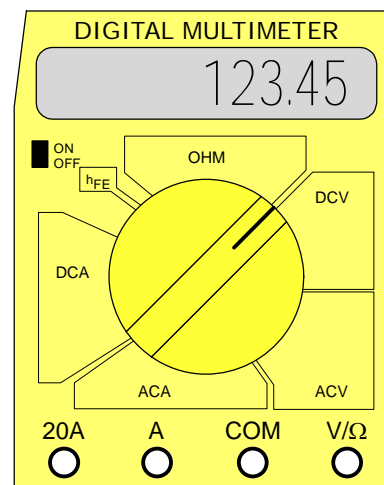


Figure 1

### 2. Changing the measurement scale:

The range of settings determines the maximum quantity that can be measured. For example, setting the direct current voltage (DCV) to 20 means that the meter can measure a *maximum* of 20 volts of direct current. If you were to measure the voltage of a 1.5 volt, AA flashlight battery, you could set the knob to 2, 20, 200 or 1000. Note that as you increase the scale, the precision of

the measurement will decrease (fewer significant figures will be displayed). Therefore it is good practice to always use the lowest range setting that will still allow you to make the measurement.

### 3. The number '1' appears on the left side of the display. What does that mean?

When '1' is displayed on the *left* side of the display (Figure 2), the quantity being measured exceeds the maximum value set by the scale (in OHM mode, this display indicates an *open circuit*). Simply turn the knob to another setting to increase the maximum possible reading until you can record a measurement. For example, if you were again measuring the voltage across the 1.5 volt, AA flashlight battery, choosing the 200 *m* (200 *millivolt*) setting will produce an error. Increasing the setting to 2 volts (or higher) will allow you to properly measure the voltage.


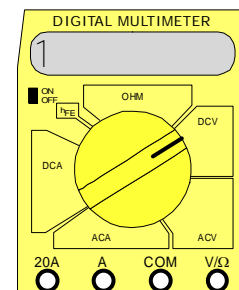


Figure 2

### 4. Why is there a battery symbol on the display?

If you see a steady or flickering battery symbol in the lower left corner of the display (as shown at right), bring the meter to your instructor for immediate replacement. A low battery will create erroneous measurements.



### 5. Connecting measuring leads (wires) to the multimeter:

The connection of measuring leads to the multimeter depends upon the intended measurements. There are four ports for connecting wires at the bottom of the multimeter. *It is important to note that you will have only two wires plugged into the multimeter at any one time!* The ports are labeled as follows:

- **COM:** This is the common ground, or negative terminal of the meter. Typically, a black wire is inserted in this port when using the multimeter as a voltmeter, ammeter or ohmmeter. You will *always* have a wire plugged into this port, no matter the meter setting.
- **V/Ω:** This is referred to as the positive terminal of the voltmeter/ohmmeter. When using the multimeter as a voltmeter or ohmmeter, the red wire gets plugged into this port. Note that in DC circuits, red color implies the positive terminal, black color the negative (or ground). These colors don't apply to AC circuits, but we will retain the convention to make the analysis clearer.
- **A:** When using the multimeter as an *ammeter*, the red wire typically gets plugged into this port. When measuring the current through a DC circuit, be sure to observe the polarity of the voltage source so that you get the correct sign for the direction of the current.
- **20A:** This port will not be used in this course; it is used for measuring very high currents, and there is no fuse protecting the meter. *Never* insert a wire in this port; you risk damaging the meter!

The examples on the next page will show the proper method of connecting the multimeter to your circuit when it is used for various measurements.

**Example 1: Measuring voltage or resistance:**

When the multimeter is used as a voltmeter or an ohmmeter, you will insert *two* wires into the meter: one in the **COM** port, the other in the **V/Ω** port, as shown in Figure 3 below. Turn the knob to the appropriate setting and voltage type before touching the circuit component (e.g. a battery or resistor). In Figure 3, the voltage across a 9-volt battery is being measured. Note the orientation of the meter wires with respect to the positive and negative terminals of the battery; reversing the meter wires will produce a negative voltage reading. The meter wires will be connected in the same manner to measure the resistance of a circuit component.

When functioning as a voltmeter or ohmmeter, the meter has a high internal resistance, and is connected *in parallel* to the circuit component, touching both sides to record the measurement.

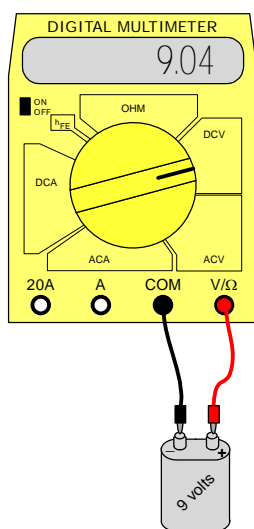


Figure 3




Figure 4

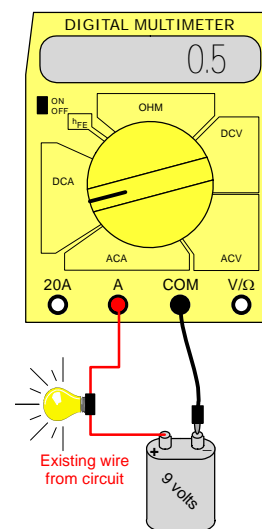


Figure 5

**Example 2: Measuring the current through a circuit:**

Figure 4 shows a simple circuit consisting of a battery and a bulb. Configuring the multimeter as an ammeter will allow you to measure the current through this circuit. Do this by inserting *only one* wire into the meter, typically the **COM** port, as shown in Figure 5 above. Using a single wire in the meter reminds you that you have to open the circuit up and insert the free wire into the **A** port. In Figure 5, a black meter wire is connected to the **COM** port, and touches the negative battery terminal; the red wire was disconnected from battery and connected to the **A** port (note that the battery polarity in Figures 4 and 5 has been reversed from Figure 3 in order to simplify the picture!).

The ammeter has a very low internal resistance, and is connected *in series* with your circuit components to measure the flow of current through them, without disturbing the current. It is for this reason that it is *very important* that the ammeter is connected correctly to the circuit. Since it has a lower resistance than the circuit components, you might create a short circuit and blow a fuse if the ammeter is connected incorrectly!